



FITTING INSTRUCTIONS

BMW F650GS and F800GS – Auxiliary Light Bar

- 1 Locate and undo beak mount bolts



- 2 And remove the beak



- 3 Leaving the infil panel and spire nuts in place



FITTING INSTRUCTIONS




- 4 Offer up the light bar to the beak, insert stainless steel bolts through the stainless steel reinforcing plates, beak, and lightbar



- 5 At this point offer up the lightbar and beak and locate the stainless steel bolts.



FITTING INSTRUCTIONS

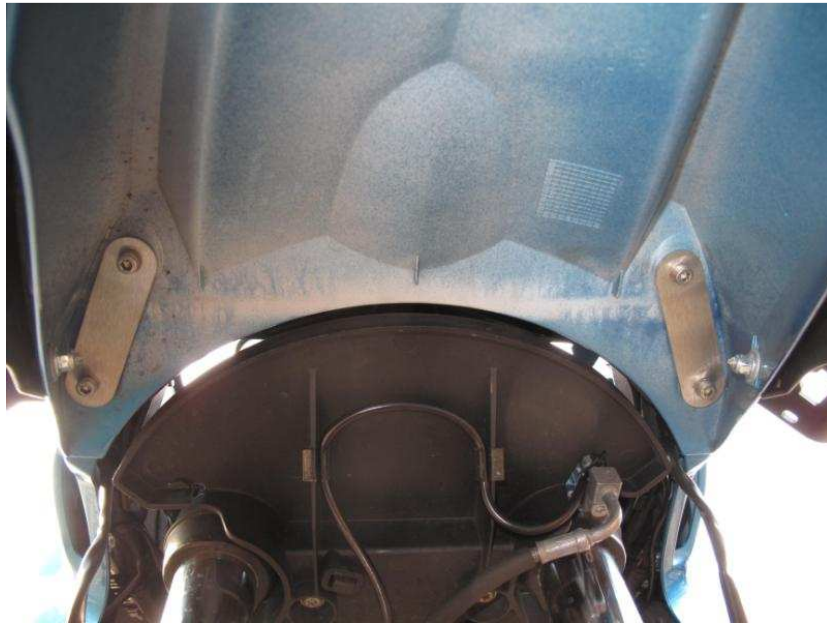

6 Once all 4 bolts are located then tighten





FITTING INSTRUCTIONS

