



---

## FITTING INSTRUCTIONS

---

### BMW F650GS / Dakar (Single)– Radiator Guards



#### Contents

1 x Left Side Radiator Guard

1 x Right Side Radiator Guard

1. Remove both side panels.






---

## FITTING INSTRUCTIONS

---

2. Undo the two Torx bolts securing the plastic radiator ducts and remove them.

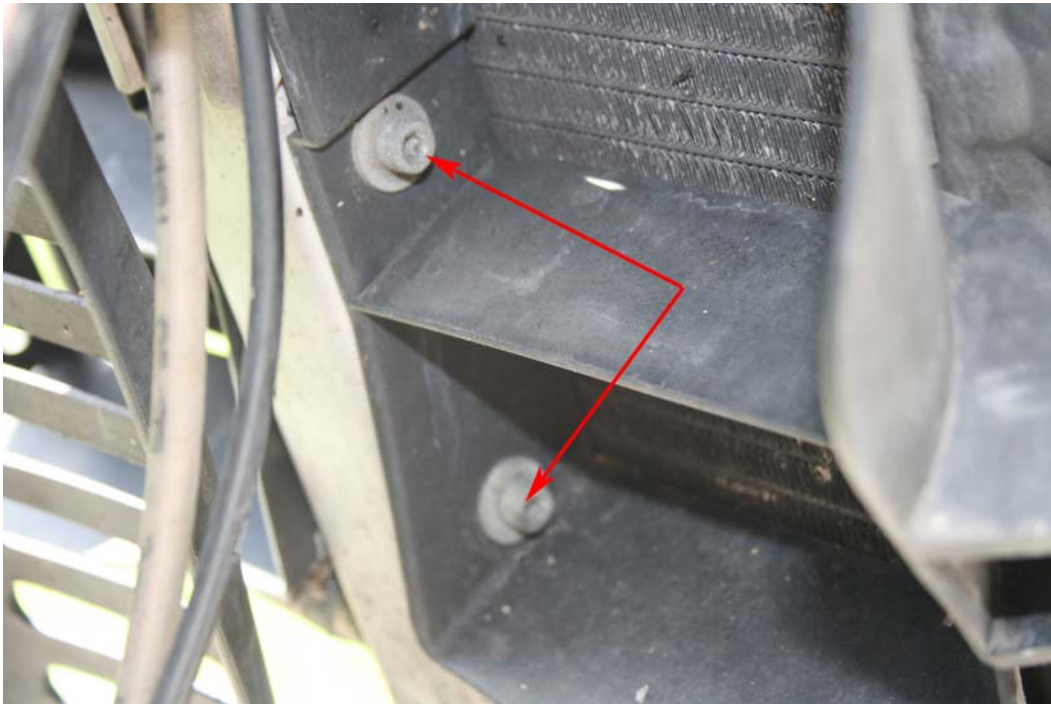

3. Now prise out the rubber locating grommets from your original plastic ducts and install them into your Rugged Roads radiator guards.





---

## FITTING INSTRUCTIONS

---

4. Mount both Rugged Roads Radiator Guards to the existing mounting points – using the original Torx bolts that you removed previously.





---

## FITTING INSTRUCTIONS

---



5. Remount both side covers making sure the lower locating lugs are pushed firmly into the rubber grommets on the new radiator guards.



6. Stand back and admire – job done!